


Don & Low Roofing Accessories

TX[®] 10K Slate Vent

Fixing Instructions

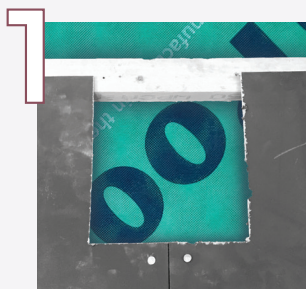


1 Set out the roof and lay the slates in line with the manufacturer's fixing instructions until you reach the area where the vent tile is to be fitted.



5 If the slate vent is being used for roof space ventilation, fit the **Slate Vent Adaptor DL3SVA** and/or **Flexipipe DL3FP** for connection to soil pipe & mechanical extraction. Ensure underlay is cut as shown in Step 2.




2 Mark a cut line 220x60 mm on the two slates where the vent is to be fitted and cut out the section of slate. Mark and cut the membrane with an "X" between two battens
Note: this should not clash with a rafter. If using the vent for batten ventilation, there is no need to cut the underlay.

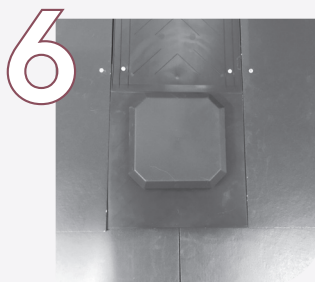


6 Continue by fixing the slate vent into the slate batten above, in line with the slate course. Fix through both fixing points with the same fixings used for the slates.



3 Fold the top envelope section of the membrane from your "X" cut over the top batten. Secure into position with a felt tack into the batten above.

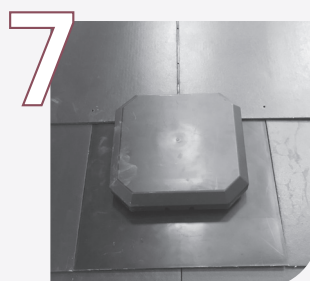

7 Continue slating the remainder of the roof and repeat above steps as necessary should further vents be required.

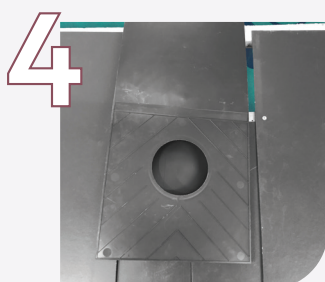

4 If the slate vent is only being used to ventilate the batten cavity use the 10k Slate Vent without an adaptor and without cutting the underlay.

Construction Technical Services

0808 169 4444

Don & Low Ltd, Glamis Road, Forfar, Angus, DD8 1FR, Scotland, UK
Tel: +44(0)1307 452200 Fax: +44 (0)1307 452201

Don & Low assumes no liability for written errors within this document.

15 YEAR
WARRANTY

All products are covered by 15 year Durability Warranty. Terms and conditions apply.

MADE IN THE UK

All plastic products are made in the UK.