



# Don & Low Roofing Accessories

## Ambi Dry Verge


### Fixing Instructions

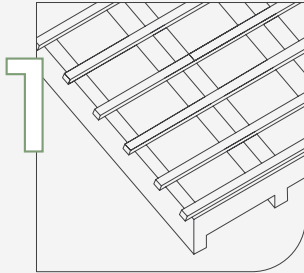


**1** Install the tiling battens with a 40mm overhang over the brick or barge board. For refurbishment projects such as removing mortar bedded verges, install a new tiling batten to the ends of the existing tiling batten running it parallel to verge.

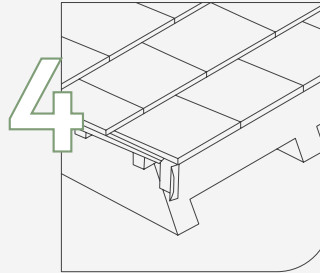


**4** Slide the first verge unit over the tile at the eaves and into the starter kit, fitting it under the tile head laps above to ensure the unit is firmly held in place. Fix the unit through the top grid into the batten with a 40x3.35mm screw.

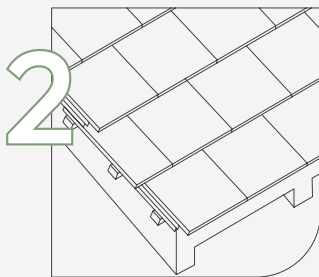


**2** Set tiles flush with the end of the battens. For refurbishment projects remove existing mortar bedding and install new tiling batten, as mentioned in Step 1 above.

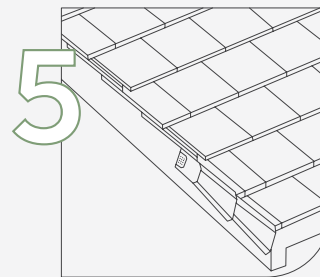


**5** Slide the next verge unit into the upper edge of the first unit. Press firmly to the tile fitting it under the head laps to ensure the unit is firmly held in place. Screw the unit through the top grid into the batten.  
**Note:** the tail end of the unit should fully interlock with the lower unit. When interlocked properly it should not move freely.

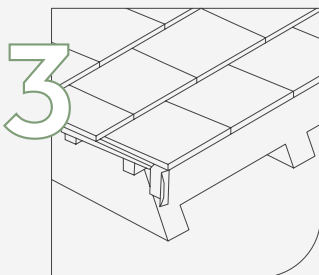


**3** Starting at the bottom edge of the roof (eaves), insert the starter piece (remove the tab to suit as shown below). Place starter into the front end of the verge unit and mark out the starter position on the fascia and barge board. Remove the starter unit and mechanically fix the starter into position through the grid with a 40x3.35mm screw.

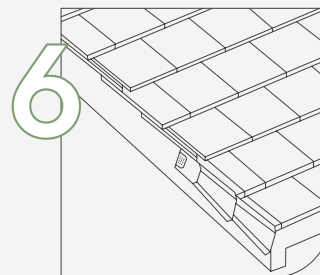

**6** Continue the process along the gable/barge board to the ridge.

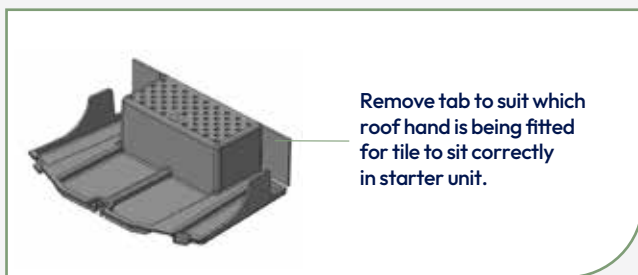

Remove tab to suit which roof hand is being fitted for tile to sit correctly in starter unit.

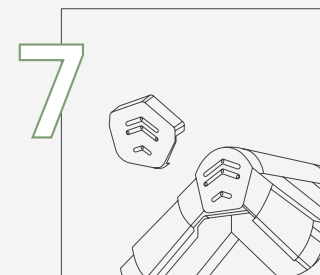

**7** Finish with the half-round Dry Verge End Cap DL2ECR or the universal angled Dry Verge End Cap DL2ECA. Fit by interlocking cap edges with the verge units and then screw fix through the face into the barge board or masonry. A tile manufacturer's block end ridge may be used as an alternative.

Ensure when installing the tiling battens that a 40mm overhang on the brick or barge board is present to ensure correct fixing.